


## A) Leaving your home...

1 Check that all doors and windows are secured.

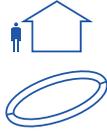

2 Press the **FULL ARM** button on your control panel.



FULL ARMING  
14 TO EXIT

The exit delay counts down.

"beep"  
"beep"  
"beep"

3 Leave the building via your designated exit route.

FULL ARMED  
10:35:43

The system is fully armed.



## B) Entering your home...

1 Enter the premises via your designated entry route and go to the keypad.

FULL ARMED  
21 TO DISARM

The entry delay counts down.

"beep"  
"beep"  
"beep"

2 Enter your four-digit user code to disarm the system.

DISARMED  
11:22:02

The system is disarmed.




## C) Arm/Disarm with the keyfob...

You can perform all arm/disarm functions by using the four-button keyfob.



The keyfob's buttons offer the following functions:

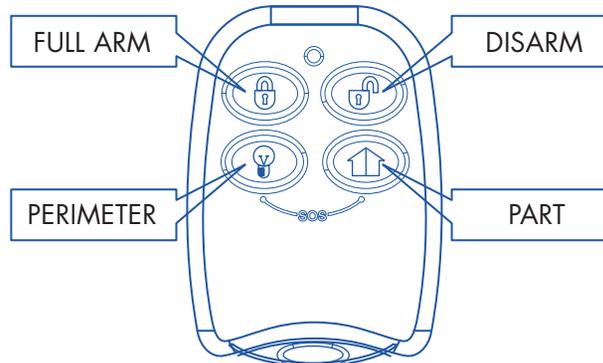

## D) Cancelling the siren...



1 You can silence the siren by entering your four-digit user code.

If the system is armed, entering this four-digit code will disarm the system.



SECURITY SOLUTIONS



Quick Reference Guide

## E) Intrusion Indicator...

After an alarm has occurred, the  indicator flashes.

If you see this indication or any other visible signs of intrusion, leave immediately!

Contact Security Solutions monitoring service for assistance.

## F) Resetting after an alarm...


Arming then disarming your system after an alarm resets the system and clears the alarm indication.

## G) Generating a panic alarm...

On the control panel, press and hold both **SOS** buttons simultaneously.



On the keyfob, press and hold the lower two buttons simultaneously.

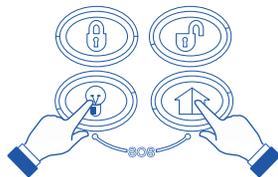

## H) Emergency Telephone Numbers



Local Police Dept. -----

Local Fire Dept. -----

Local Sheriff 's Office -----

Poison Control -----

Other -----

Other -----

Other -----

Other -----

Other -----

Other -----

Security Solutions Monitoring Center

**866-463-8318**

FOR PREMIUM PACKAGE CUSTOMERS

## When you are away...

To call your home:

1. Dial your telephone number.
2. Wait for two or three rings then hang-up.
3. Wait at least five seconds and dial the number again; on the second ring, the control panel answers the call and sounds two tones.
4. Enter your two-way audio user code (which must be different from your standard code) on your telephone (see 6.3: User Codes, code 29).

*Do not enter your user code until you hear the two tones. Any digits entered before the two tones will be disregarded by the system.*

5. The call is connected and two-way audio is established.
6. The duration of the call is an option programmed by your installer. Five seconds before the end of the call, two short tones are sounded. To extend the call, press 7 on your telephone.
7. To disconnect before the end of the call, press "\*" then "#" on your telephone.